



You have these conditions:


Existing Doors

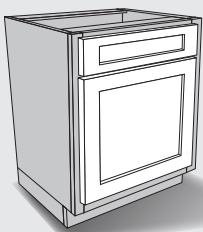

Framed Cabinet

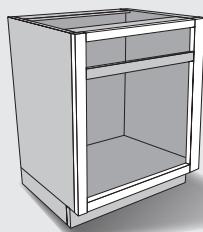

Doors Are In Front of Cabinet Frame

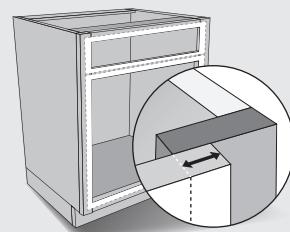

Determine your door & drawer front sizes:

1. Download our helpful form to record your information the same way our website will ask for it. [Measurement Form](#)
2. Calculate your hinge overlay using the formula on the right to determine if it's one of the Available Hinge Overlays.

If your hinge overlay is any of the Available Hinge Overlays:

- Measure your existing doors and drawer fronts to the closest 1/16" (0.0625"). Measure width first, then height.

If your hinge overlay is not any of the Available Hinge Overlays, we suggest you use a 1/2" overlay on your replacement doors:

- Measure your cabinet opening to the closest 1/16" (0.0625").
- Add 1" to the cabinet opening width and to the opening height.

Write the dimensions and quantities you need on the measurement form.

3. Double check that you haven't missed a part. The number of parts on the form should match the number of doors and drawers you need.

Calculate Your Hinge Overlay

$$\frac{(\text{Door Width}) - (\text{Opening Width})}{2} =$$

Available Hinge Overlays

1/2"	0.5"
3/4"	0.75"
1"	1.00"
1-1/4"	1.25"
1-3/8"	1.375"



What to order:

1. Order hinges based on your hinge calculation.
2. Order doors and drawer fronts with the dimensions determined above.

We're here to make it easy. Call: 844-4-THE-KIT | customerservice@Qwikkit.com