



## You have these conditions:

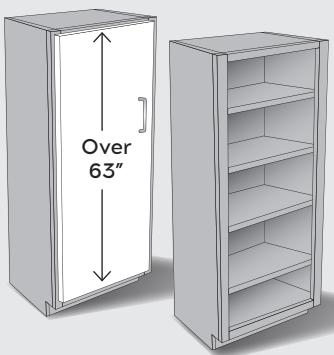

**Existing Door or No Door Over 63"**

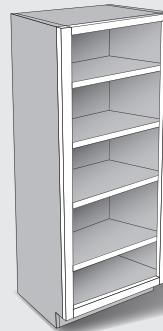

**Framed Cabinet**

**NOTE 1:** Our maximum door size height is 63", for sizes larger you will need to order 2 doors.

**NOTE 2:** Your doors will be attached together using our mending kit.



## Determine your door front sizes:

1. Download our helpful form to record your information the same way our website will ask for it. [Measurement Form](#)
2. Calculate your hinge overlay using the formula on the right to determine if it's one of the Available Hinge Overlays.

### If your hinge overlay is any of the Available Hinge Overlays:

- Measure your existing door to the closest 1/16" (0.0625"). Measure width first, then height.
- Divide the height into 2 doors less than 63" each.

### If your hinge overlay is not any of the Available Hinge Overlays or you have No Door, we suggest you use a 1/2" overlay on your replacement door:

- Measure your cabinet opening to the closest 1/16" (0.0625").
- Add 1" to the cabinet opening width and to the opening height.
- Divide the height into 2 doors less than 63" each.

3. Write the dimensions of the doors you need on the measurement form.

Calculate Your Hinge Overlay	
$\frac{(\text{Door Width}) - (\text{Opening Width})}{2} =$	

Available Hinge Overlays	
1/2"	0.5"
3/4"	0.75"
1"	1.00"
1-1/4"	1.25"
1-3/8"	1.375"



## What to order:

1. Order 2 doors to cover opening with the dimensions determined above.
2. Order the accessory item: **"I-O295 Mending Plate to Join Doors, with Screws."**

We're here to make it easy. Call: 844-4-THE-KIT | [customerservice@Qwikkit.com](mailto:customerservice@Qwikkit.com)