



## You have these conditions:

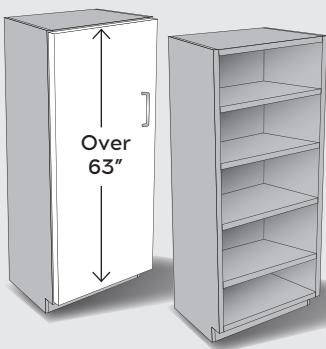

**Existing Door  
or No Door  
Over 63"**

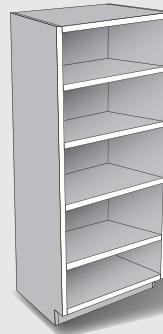

**Frameless  
Cabinet**

**NOTE 1:** Our maximum door size height is 63", for sizes larger you will need to order 2 doors.

**NOTE 2:** Your doors will be attached together using our mending kit.



## Determine your door front sizes:

**1.** Download our helpful form to record your information the same way our website will ask for it. [Measurement Form](#)

**2.** Measure your end panel thickness. It will be 5/8" (0.625") or 3/4" (0.75").

**3.** Use one of the following methods to determine the width and height of both doors. Measure to the closest 1/16" (0.0625").

**For Existing Door:** measure the width and height of existing door.



- Divide the height into 2 doors less than 63" each.

**For No Door:** measure the width and height of cabinet opening.

- With 5/8" End Panel** - Add 1" to opening width and height. Divide the height into 2 doors less than 63" each.

- With 3/4" End Panel** - Add 1-3/8" (1.375") to opening width and height, Divide the height into 2 doors less than 63" each.

**4.** Write the dimensions of the doors you need on the measurement form.

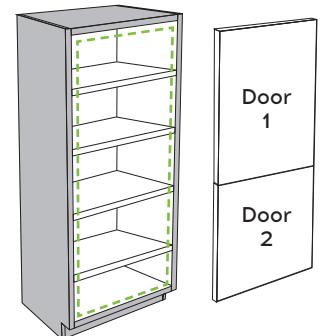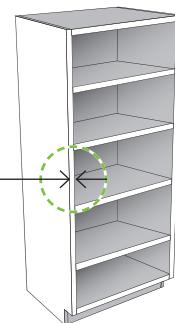

## What to order:

**1.** Order 2 doors to cover opening with the dimensions determined above.

**2.** Order the accessory item: **"I-O295 Mending Plate to Join Doors, with Screws."**

We're here to make it easy. Call: 844-4-THE-KIT | [customerservice@Qwikkit.com](mailto:customerservice@Qwikkit.com)