


Paint Ready  
Shaker Classic

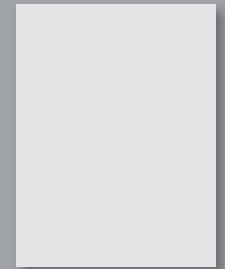

Paint Ready  
Slab

Paint ready doors are primed for paint and come in shaker and slab styles. The best practices below can lead to a long-lasting finish in any color you choose. Order a test door to see for yourself.

- 1 Don't sand the surface of the doors. Doors are pre-primed and ready to accept paint.
- 2 Before painting make sure to clean surface with a light cleaning solution (warm soapy water, 409, etc.) and dry thoroughly.
- 3 Putty can be applied to cover small imperfections or joinery. Make sure to wipe off excess and don't sand.
- 4 All types of paint can be used with a brush, roller or sprayer.
- 5 Refer to paint manufacturer's product data sheet for best paint application.
- 6 Coverage can be completed in one step, but multiple layers can be applied if desired.

