


Hinge Offset Rules

- 1 The hinge offset for the top and bottom hinge is always the same - **Standard offset is 3"**.
- 2 For 3 Hinge doors, the middle hinge is always centered between the top & bottom hinge.
- 3 For 4 hinge doors, the middle two hinges are placed at one-third and two-thirds of the way between the top and bottom offset.
- 4 Our standard hinge pattern includes an **8mm dowel hole**.

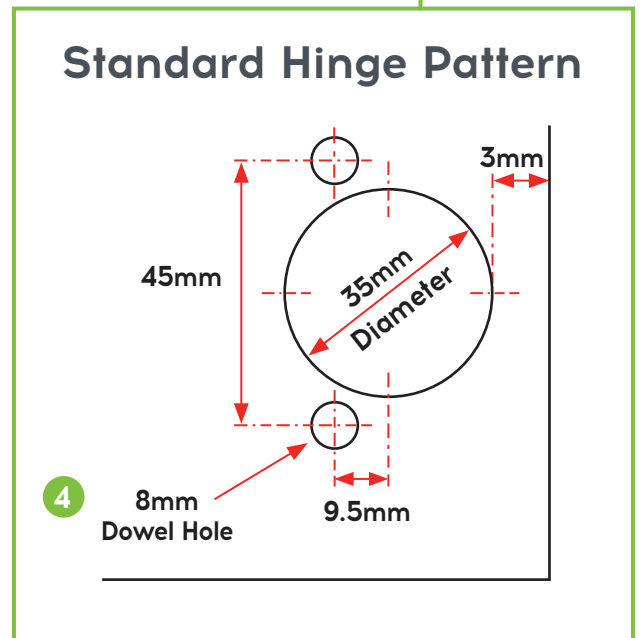

We're here to make it easy. Call: 844-4-THE-KIT | customerservice@Qwikkit.com